




SGS-ENGINEERING.COM

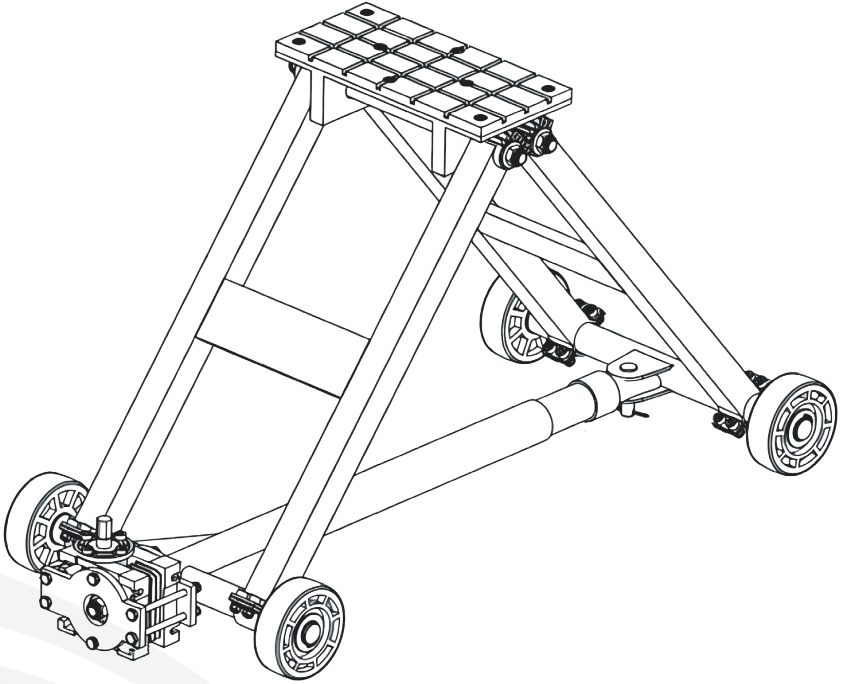


TJCL2.5
Trolley Jack Car Lift
2500kg

OWNER'S MANUAL

SAFETY INSTRUCTIONS

Do not exceed the capacity indicated. Once the load is lifted, it is imperative that the load is locked by means of the anti-tilt arm.

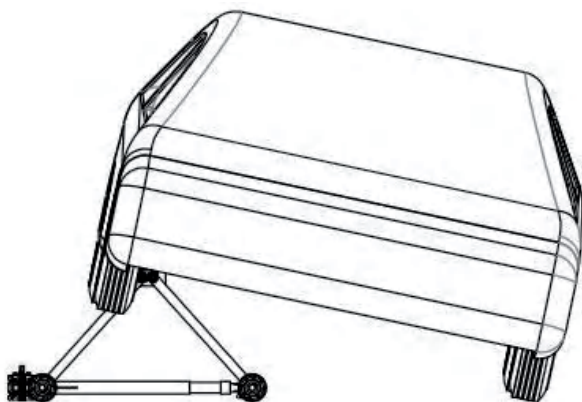

It is forbidden to work under the vehicle without having first positioned it on jack stands.

The anti-tilt arm gives additional safety, but does not remove the need to use jack stands.

Use a hard, level non-slippery surface, suitable for supporting the load.

Check that the load is stable on the jack. Make sure that there is no risk of it tilting or slipping.

Do not try to move the load when it is resting on the jack.

Never use a damaged or worn jack.

Do not modify this item.

Do not drive onto this jack.

This jack is exclusively designed for lifting cars. Any other use is forbidden.


While lifting or lowering a car, do not allow anyone other than the operator to approach the vehicle.

Follow the drill's instructions for use. In particular, because of the risks presented by the electrical supply, do not use where water is present. We advise the use of a class II drill.

Otherwise, install a 30 mA differential circuit breaker on its supply.

Non-respect of these recommendations may cause damage to property and people.

DESCRIPTION

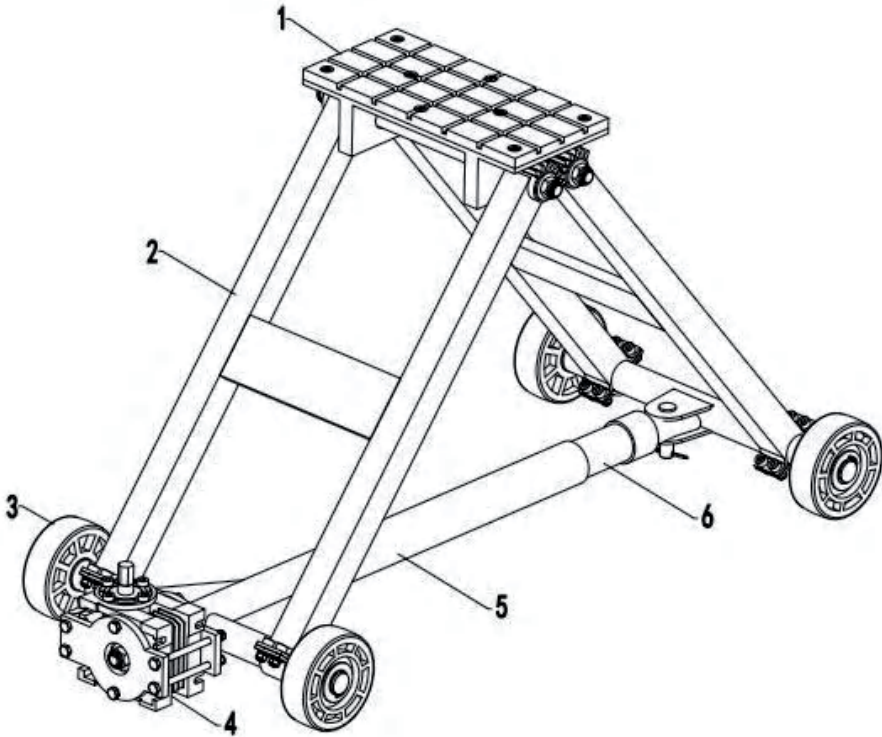

- 1: tilting runners
- 2: anti-tilt safety arm
- 3: wheel
- 4: turbine
- 5: inspection hole
- 6: threaded tube

SAFETY MEASURES

The Mini Lift must be operated with an electric drill which has a sufficient torque(90 Nm).The use of impact wrenches, air bolt removers or striking tools is strictlyforbidden because of the damage which could be caused to the drives.

Use on a flat, hard, smooth floor (for example, concrete). A rough floor can hinder the working of the Mini Lift, by putting up too much resistance to the movement of the castors. Before lifting or lowering the load, systematically check that the obstacles preventing the descent (jack stands and anti-tilt arm) are removed

The warranty does not apply if the safety instructions and the safety measures are not followed.

Range of operating temperatures: -10/+50 °C

LOAD LIMITATION

The connecting pin between the drill and the Mini Lift acts as a protection in the event of excessive load or when the maximum height is reached. In these situations, the breaking of this pin is normal. Replace this pin with a new pin, then continue using, making sure that the instructions for maximum load and height are followed.

The Mini Lift is fitted with end stops, for the maximum lift position and the lowest position. Also the load limiting pin is going to break if the user overrides the stops by continuing to operate the drill. Before reaching the end of the lift, it is therefore necessary to gradually slow the movement and to stop it before reaching the stop. Never override the stops.

Do not try to use the Mini Lift with a pin different to the one supplied originally.

LIFTING

It is also possible to lift or lower the load using the crank and the cardan supplied.

- Before reaching the maximum height, slow the lifting speed. Do not exceed the maximum height marked by the red line on the telescopic arm located on the side.
- Check that the vehicle is stable before working underneath it. It must not be able to slip or tilt, even if the user should push against it while working. If there is a risk of the vehicle

tilting, re-lower the Mini Lift and move it so as to place more weight on the wheels which remain on the ground.

- Install the safety jack stands before working under the vehicle.

TILTING

Only for working on the front or the rear of the vehicle:

If the vehicle's centre of gravity is aligned with the axis of the Mini Lift, it tends to tilt either left or right. To avoid this, it is imperative to use jack stands and the safety arm. In addition, it is recommended that the axis of the Mini Lift is moved from the vehicle's axis of gravity, in order to place more load on the wheels that remain on the ground.

If one end of the vehicle is raised and the user wishes to work on the other end, you must lower it and then lift it again having changed the position of the Mini Lift to change the distribution of the load and lift the desired end.

SCRAPPING

If the Mini Lift is disposed of:

- The grease coming from the drives or the threaded rods must be removed in accordance with the standards in force in the country where it is installed.
- All the metal parts can be recycled; rubber runners must be removed in accordance with the standards in force in the country where it is installed.



SGS-ENGINEERING.COM