
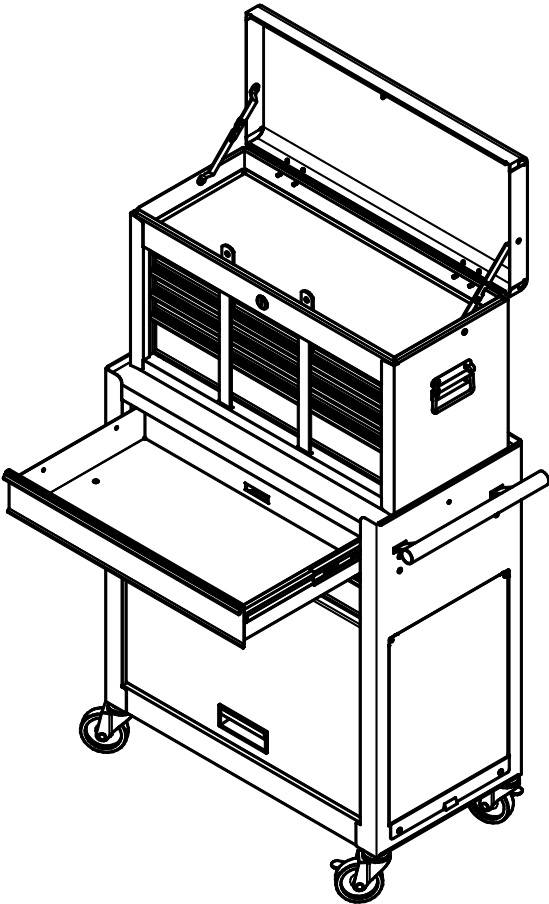
 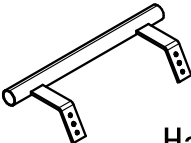


SGS STC1000GR

OWNER'S MANUAL



PARTS LIST

 Caster--2	 Handle--1	 Screw ST4X8--8
		 Screw M6X12--4
 Caster--2	 Handle--2	 Hook--5

WARNING

- A) Do not open more than one loaded drawer at a time.
B) The maximum loading capacity is 70kgs (154 lbs) .


FOR YOUR SAFETY
PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND RETAIN THEM FOR FUTURE USE.



ASSEMBLY


1 REMOVE SIDE PANEL

Remove screws with a screwdriver.

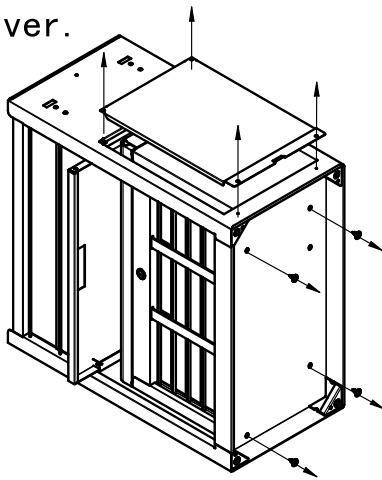


2 REMOVE CHEST


Place cabinet on a level surface. Slowly remove chest from the cabinet.

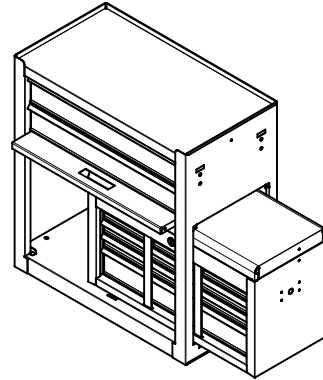


3 HANDLE ASSEMBLY

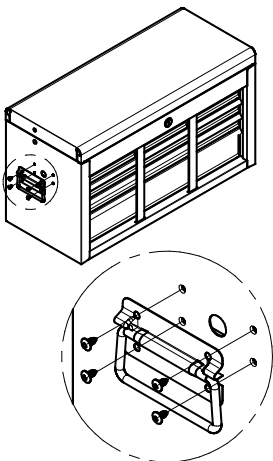

4 CASTER ASSEMBLY

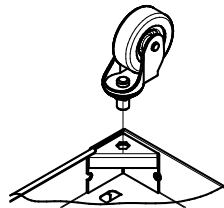

5 HANDLE ASSEMBLY

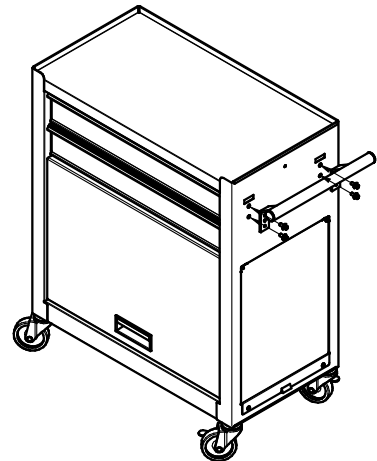

BALL BEARING DRAWER SLIDES: If it becomes necessary to remove drawers, follow these drawer removal instructions:

- A) Ball bearing slides have black retaining clips. To remove drawer, the retaining clips need to be released by pushing lever up or down simultaneously, and pulling drawer out.
- B) To re-install drawers, simply place drawer onto slides and push in fully.

