


SGS STC22BLLO

 
OWNER'S MANUAL

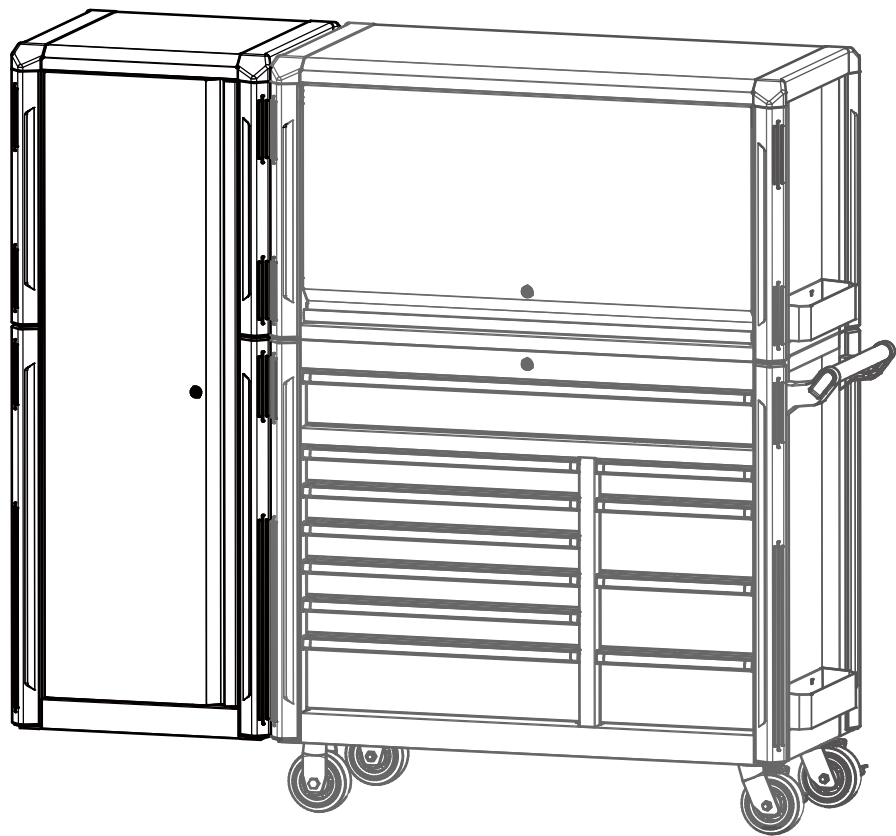


PARTS LIST



Hanger--1




Hanger--2

 

Blot M8x16--10



 Nut M8--4



Blot M6x16--1


WARNING

- A) Do not open more than one loaded drawer at a time.
B) The maximum loading capacity is 70kgs (154 lbs) .

FOR YOUR SAFETY
PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND RETAIN THEM FOR FUTURE USE.



ASSEMBLY

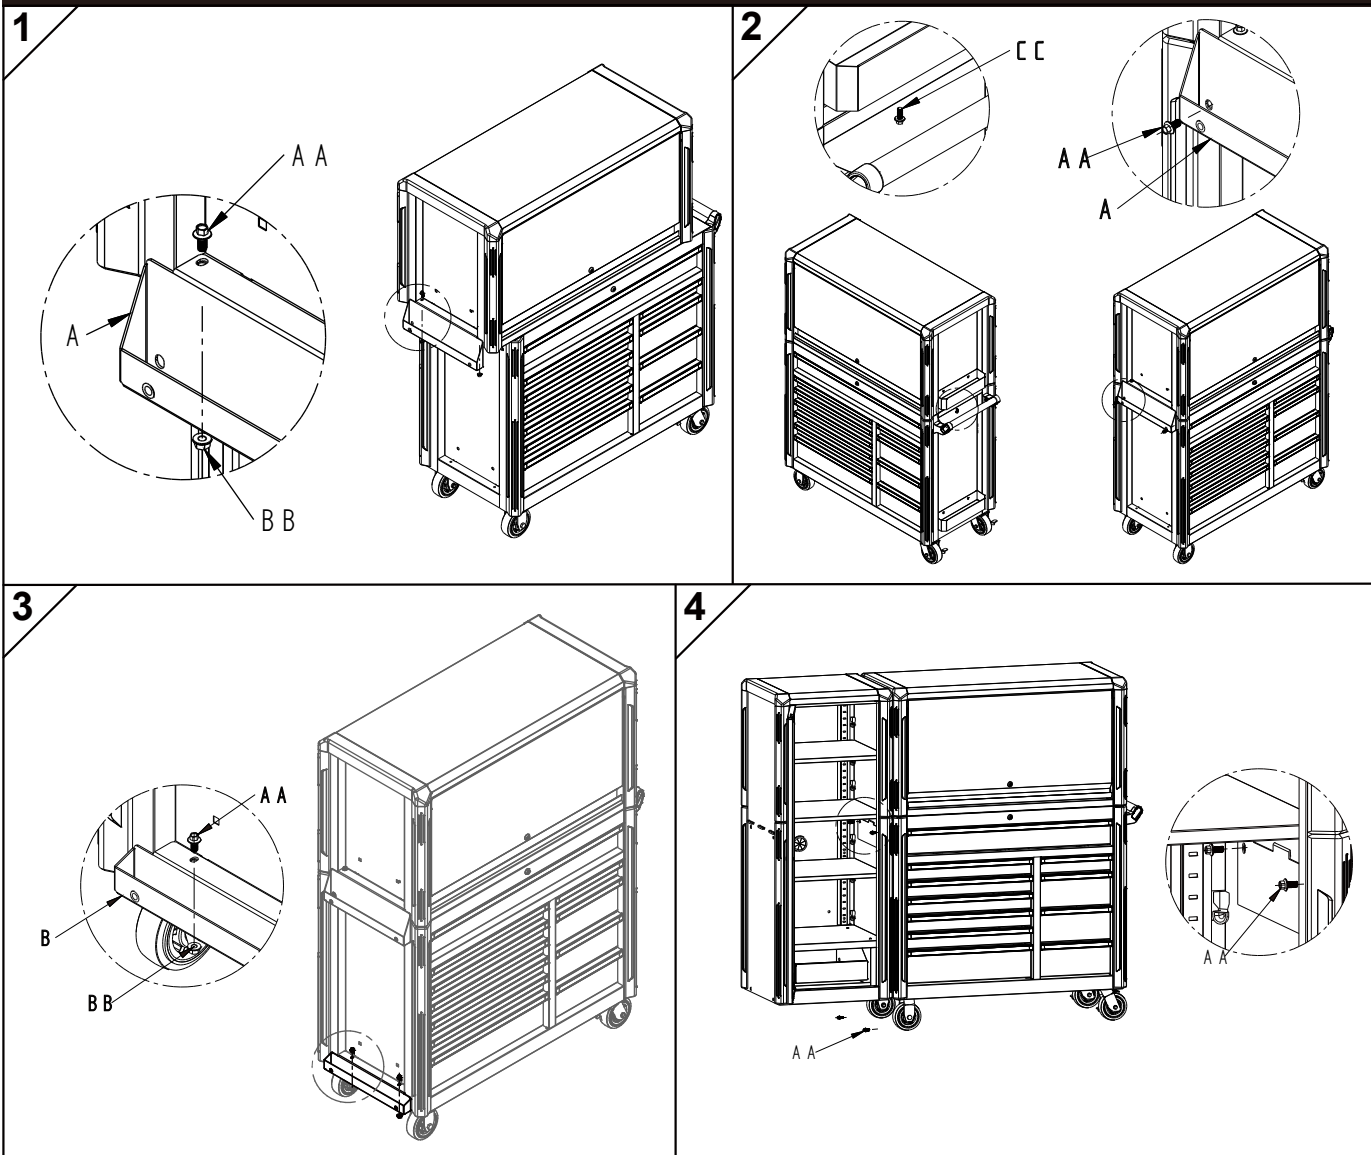

BALL BEARING DRAWER SLIDES: If it becomes necessary to remove drawers, follow these drawer removal instructions:

- A) Ball bearing slides have black retaining clips. To remove drawer, the retaining clips need to be released by pushing lever up or down simultaneously, and pulling drawer out.
- B) To re-install drawers, simply place drawer onto slides and push in fully.

