



STCWB001


OWNER'S MANUAL

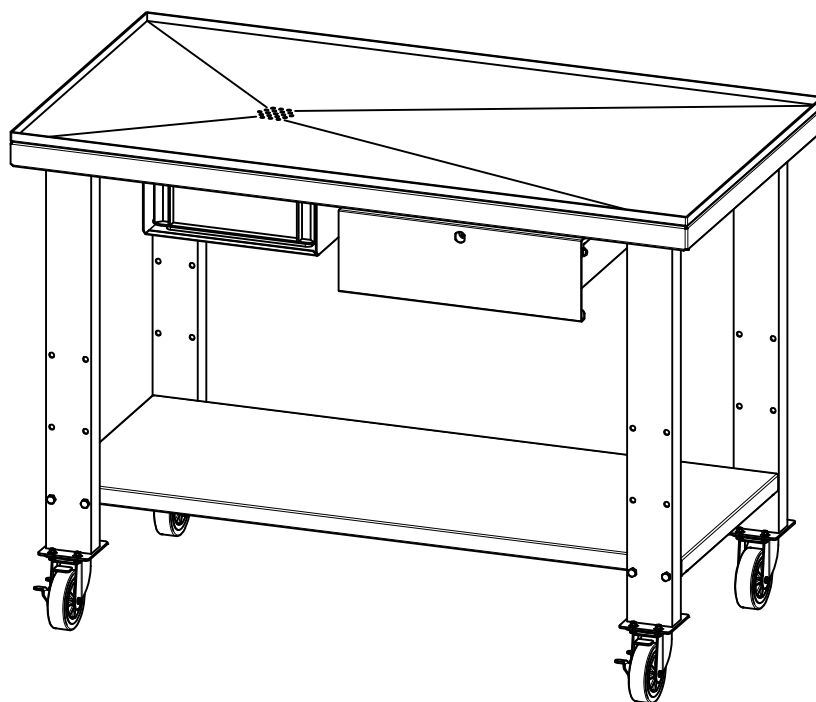


PARTS LIST

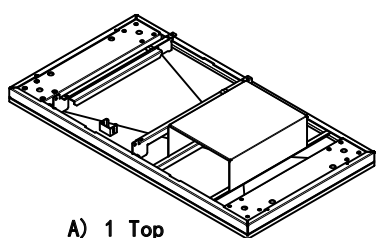


A) 1 Top

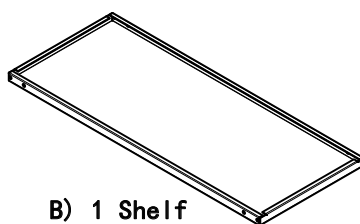


B) 1 Shelf

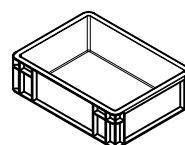

C) 1 Plastic box

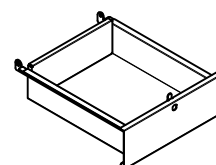

D) 1 Drawer

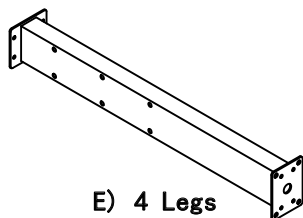


E) 4 Legs



G) 2 Swivel wheels



F) 2 Swivel locking wheels

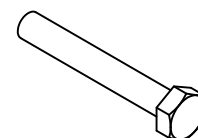

I) 8 Screws M8x55



J) 8 Nuts M8



K) 16+1 Screws M6x2



L) 16+1 Nuts M6




M) 16+1 Screws M8x16

FOR YOUR SAFETY
PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND RETAIN THEM FOR FUTURE USE.




ASSEMBLY

1

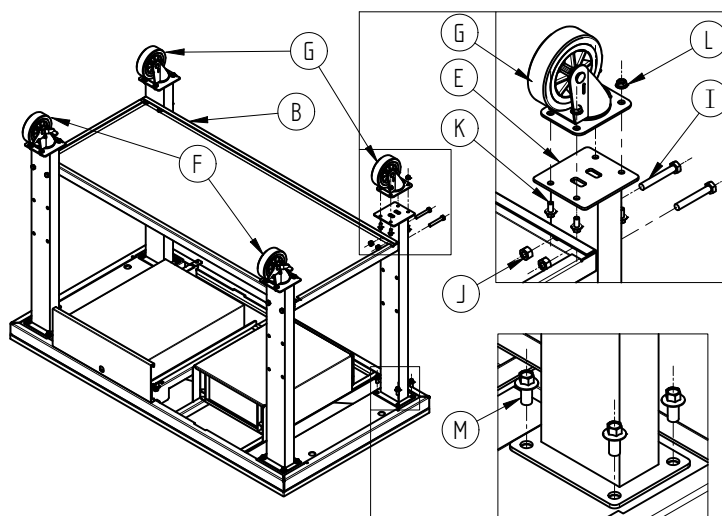

2

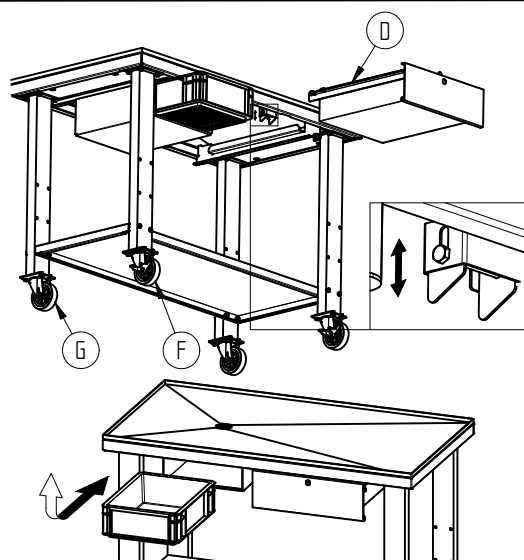

BALL BEARING DRAWER SLIDES: If it becomes necessary to remove drawers, follow these drawer removal instructions:

- A) Ball bearing slides have black retaining clips. To remove drawer, the retaining clips need to be released by pushing lever up or down simultaneously, and pulling drawer out.
- B) To re-install drawers, simply place drawer onto slides and push in fully.

