

Rolling Table Cart

IMPORTANT! PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE ALL SAFETY INSTRUCTIONS AND WARNINGS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE DAMAGE TO PROPERTY AND/OR PERSONAL INJURY.

PLEASE KEEP THESE INSTRUCTIONS SAFE AND AVAILABLE FOR FUTURE REFERENCE.

INTRODUCTION

Thank you for purchasing this product which has passed through our extensive quality assurance process. Every care has been taken to ensure that it reaches you in perfect condition. However, in the unlikely event that you should experience a problem, or if we can offer any assistance or advice please do not hesitate to contact our customer care department.

HELPLINE & SPARE PARTS

In the unlikely event of a defect occurring please contact our Helpline.
Office hours: Monday - Friday 9:00am - 5:00pm. Telephone Number 01332 576 850

TECHNICAL SPECIFICATIONS

Item	TRR00001
Capacity	45 kg
Base Size	785 mm x 630 mm
Tray Size (L x W x H)	736.6 mm x 508.0 mm x 28 mm
Min. Height	875 mm
Max. Height	1210 mm
Support Tube	45.7 mm x 17.8 mm
Base Clearance	50.8mm
Caster Size	3"


SAFETY INSTRUCTIONS

⚠ WARNING!

- Study, understand and follow all instructions before operating this device.
- Do not exceed rated capacity.
- Use only on a hard, level surface capable of supporting the load.
- No alterations shall be made to this product.
- Failure to heed these warnings may result in personal injury and/or property damage.

ASSEMBLY PARTS BREAKDOWN


No.	Description	Qty
A	Tool tray insert	1
B	Tool tray pad insert	1
C	Tool tray pad insert	1
D	Tool tray pad insert	2
E	Tool tray pad insert	1
F	Front tool divider	2
G	Tray	1
H	Washer	8
I	Bolts	4
J	Upper upright column	1
K	T-handle	1
L	Lower upright column	1
M	Flat head screw	1
N	Socket head cap screw	4
O	Lock nut	4
P	Flat washer	4
Q	Spring washer	4
R	Nut	4
S	Base frame	1
T	Caster	4

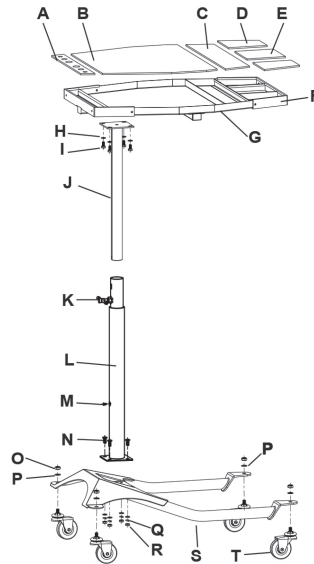

ASSEMBLY INSTRUCTIONS


1. Base Frame Assembly

Attach (T) rear casters to (S) base frame with (P) flat washers and (O) lock nuts. Attach (T) front casters to (S) base frame with (P) flat washers and (O) lock nuts.

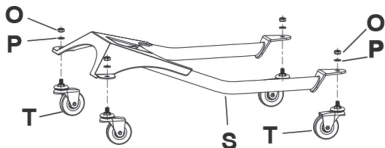


2. Attaching Column to Tray

Attach (G) tray to (J) upper column with (H) flat washers and (I) bolts. Then insert upper column to lower column. Tighten (M) Flat head screw to prevent inadvertent separation of (J) upper column from (L) lower column.

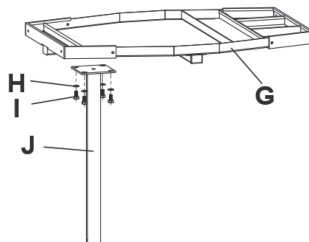

3. Attaching Column to Base Frame

Install (L) lower column to (S) base frame with (N) bolts and fasten with (H) flat washers, (Q) spring washers and (R) nuts. Install T-Handle (K).

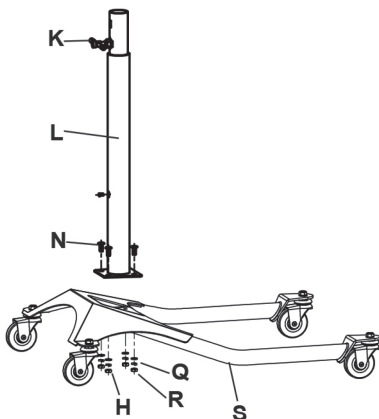

4. Attaching Columns

Use (K) T-handle to adjust height.

